


Blown Film Extrusion

Line Control

**5 Layers
CD Series
IBC
Temperature**

USER MANUAL

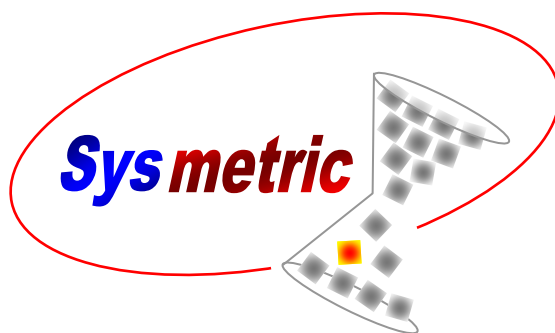

P.O.B. 1122
Afula Illit 18550, Israel
Tel: +972-4-6405857
Fax: +972-4-6405911
info@sysmetric-ltd.com
www.sysmetric-ltd.com

Manual Number: 5CDIT102
January 2010

Table of Contents

| | |
|---|-----------|
| 1. INTRODUCTION | 3 |
| 1.1. BLOWN FILM EXTRUSION | 3 |
| 1.2. LINE CONTROL | 3 |
| 1.3. THIS MANUAL | 4 |
| 2. SYSTEM OVERVIEW..... | 5 |
| 2.1. CONTROL PANEL | 5 |
| 2.2. CONTROL DISPLAY | 6 |
| 2.2.1. <i>Entering Numeric Values</i> | 6 |
| 2.3. CD SERIES GRAVIMETRIC DOSING UNITS..... | 7 |
| 3. MONITOR AND CONTROL SCREENS..... | 8 |
| 3.1. LINE SCREEN..... | 8 |
| 3.2. LINE TEMPERATURE SCREEN | 10 |
| 3.2.1. <i>Quick Heat</i> | 10 |
| 3.2.2. <i>Extruders and Die Temperature Screens</i> | 11 |
| 3.3. DOSING SCREEN | 12 |
| 3.4. TOTAL SCREEN..... | 13 |
| 3.5. LINE SERVICE SCREEN..... | 14 |
| 3.5.1. <i>General Screen</i> | 16 |
| 3.5.2. <i>IBC Tuning Screen</i> | 18 |
| 3.5.3. <i>Model Screen</i> | 19 |
| 3.6. MOTOR STATUS SCREEN..... | 21 |
| 3.7. ALARMS SCREEN..... | 22 |
| 4. PRODUCTION STABILITY AND ACCURACY..... | 23 |
| 4.1. CD WEIGHING BUCKET LOADCELL..... | 23 |
| 4.2. CD MIXER INLET PROXIMITY SWITCH | 23 |
| 4.3. CD MIXER ROTATION PROXIMITY SWITCH | 23 |
| 4.4. ROW MATERIAL SUPPLY | 23 |
| 4.5. BATCH PREPARATION PROCESS TIME..... | 24 |
| 4.6. BATCH SIZE | 24 |
| 4.7. SCREW CAPACITY OUT OF RANGE | 24 |

1. Introduction

1.1. Blown Film Extrusion

Blown film extrusion is the process of extruding plastic through a circular die and blowing the melted plastic into a bubble-like expansion. The bubble is pulled upwards until it passes through a nip-roll where it is flattened to create what is known as lay-flat of blown film. At the end of this process the lay-flat is wound on reels.

Extruding the plastic through the die can be done using several extruders in order to manufacture multi-layer films with each layer being made from different materials with different properties.

The bubble size, in the blown film extrusion, is dependent on the amount of air introduced into the bubble and the position of a calibration cage (if exists). The air inside the bubble can be continuously exchanged by what is known as IBC (Internal Bubble Cooling) system. Cooling the air inside the bubble helps cooling the plastic faster and thus enables increasing the production throughput.

Manufacturing film by this process gives the ability to regulate the film's width and thickness by controlling the volume of air inside the bubble, the output of the extruder and the speed of the nip-roll.

1.2. Line Control

Sysmetric's *Line Control* systems are designed to control the different sub-systems involved in the blown film production line in order to manufacture the film with the desired properties. The different sub-systems and controls are:

- Raw material handling – can be carried out by one of two systems:
 - o *Graviman* – loss-in-weight follow-up on the extruder throughput.
 - o *CD Series* – batch type gravimetric dosing units for preparing defined mixtures of raw material. The extruder's throughput is determined and monitored by the batch preparation rate.

Material handling can also include conveying the raw material to the *Graviman/CD* and to the extruder.

- Extruder – controlling the extruder speed (RPM).
- IBC and calibrator cage – controlling the air exchange inside the bubble and the calibrator position to form the desired width of lay-flat.
- Nip-roll – tuning the nip-roll speed for the desired Meter/Minute.
- Tension and Winder – adjusting the tension rolls and winder speed to tense the lay-flat and wind it on the reels.
- Temperature – controlling the temperature of the extruder, the die and the tension rolls.
- Remote control – setting parameters to the production line and data acquisition from a remote PC (*Minuman* software).

By controlling and monitoring these sub-systems, the *Line Control* can ensure film production with specific properties of:

- Width
- Thickness (gram-per-meter)
- Layers Ratio (in multi-layer production lines)

The different models of Sysmetric's *Line Control* systems involve different combinations of the above mentioned sub-systems of the production line and can control part or all the parameters of the blown film extrusion.

1.3. *This Manual*

This manual describes Sysmetric's line control system for blown film production lines, which involves the following:

- *5 CD Series* gravimetric dosing units (the CD model is selected to fit the production line throughput).
- Control on the speed of the 5 extruders.
- Layers ratio – adjusting the relative speeds of the extruders to receive the desired layers ratio.
- Thickness – adjusting the extruders speed to receive the desired film's thickness.
- Width – control over the calibration cage and the IBC system to produce the desired lay-flat width (ABC system).
- Temperature – control over the temperature of the extruders and the die.

2. System Overview

2.1. Control Panel

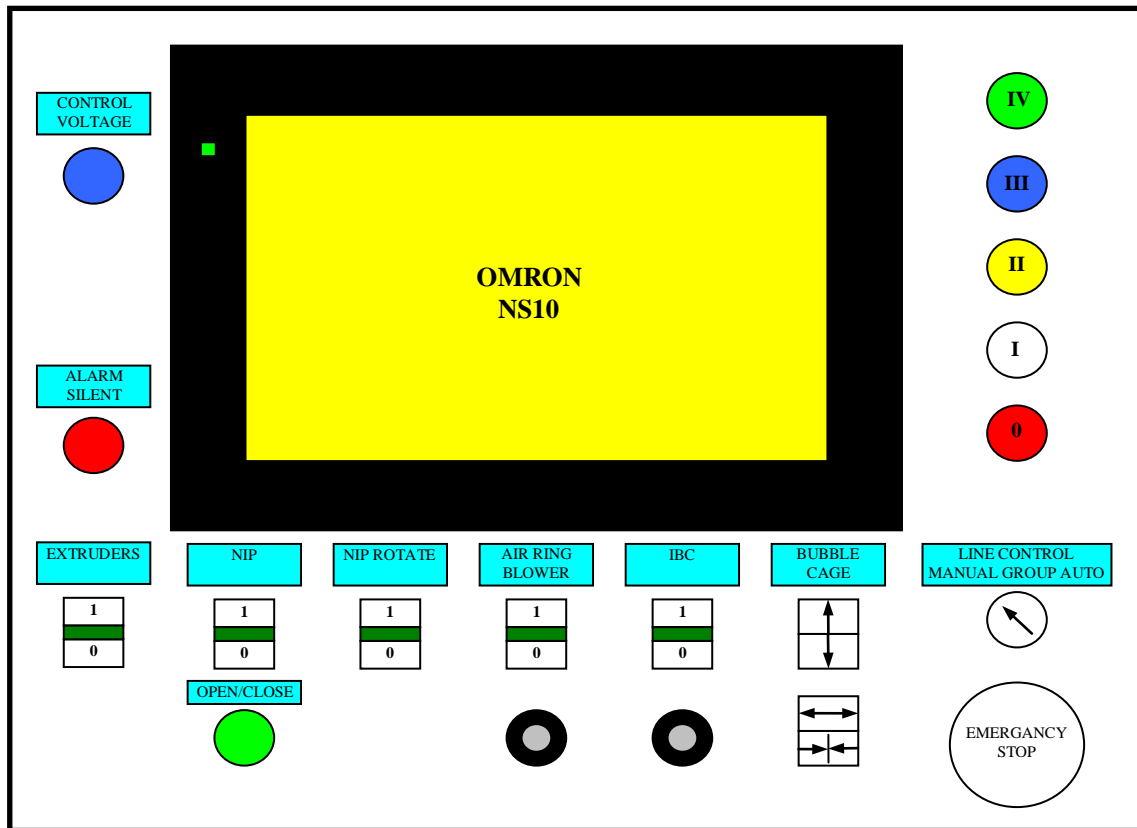


Figure 2.1-1 – Control panel

The control panel of the system consists of the following:

- Control voltage lamp indicates power supply
- Alarm silent push-button for muting the alarm bell
- Extruders on/off switch
- Nip-roll on/off switch and open/close push button
- Nip rotation on/off switch
- Air ring blower on/off switch and speed control potentiometer
- IBC intake blower on/off switch and speed control potentiometer
- Bubble cage open/close and up/down push buttons
- Line control switch to select control mode
- Emergency stop push button
- Auto-pilot stages push buttons 0, I, II, III, IV
- Touch screen display for programming and monitoring

2.2. Control Display



Figure 2.2-1 – Control display

The control display is a color touch-screen panel. Every operation on the display is carried out by pressing gently on the display. Activating a button is carried out by pressing gently on the display where the button is drawn. Changing numeric values is carried out by pressing gently on the display where the value is written.

2.2.1. Entering Numeric Values

Several screens (e.g. *LINE* screen) have one or more editable numeric items (e.g. the percentage of each layer). To modify the value of an item, carry out the following:

1. Select the item that you want to edit by pressing gently on the display where that item appears. A pop-up screen with numeric keypad will appear on the display.
2. Enter the new value using the numeric keypad. If the item has a decimal point, use the '.' key to move to the fractional part. For example, to enter 12.3, press '1', '2', '.' followed by '3'.
3. Press the *Enter* key to confirm the change. The keypad screen will close and the item will receive the new value.

Cancel editing by pressing the X button in the keypad screen.

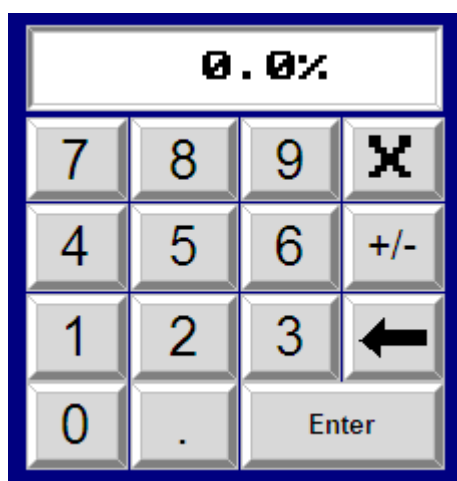


Figure 2.2-2 – Numeric keypad

2.3. CD Series Gravimetric Dosing Units

The *CD Series* gravimetric dosing units are Sysmetric's solution to raw material dosing for extrusion and injection molding processes. The CD doser reduces material cost, utilizing its high accuracy to lower the amount of expensive additives in the product. The batch weighing nature of the doser offers calibration-free operation and up-to-the-gram accumulation of raw material flowing through the system. The mechanical simplicity of the CD series units, and its practical design, ensures easy maintenance-free operation. The control unit of the CD doser combines automatic adaptive tuning and noise filtering algorithms with the ruggedness, open architecture, and extensibility of an industry-standard PLC.

The CD Series dosing units are divided to 5 models for different capacities:

- CD100 for up to 100Kg/h
- CD400 for up to 400Kg/h
- CD800 for up to 800Kg/h
 - CD800HD200 for up to 1000Kg/h
 - CD800HD400 for up to 1200Kg/h

Note: the stated capacities refer to granulated material with 0.5 Liter/Kg density and may vary with different materials.

The *Line Control* operation principles are the same for all CD models and this manual refers to all models. For detailed information on the *CD Series* dosing units, operation and maintenance, please refer to Sysmetric's *CD Series* user manual.

3. Monitor and Control Screens

3.1. Line Screen

The line screen is the main screen of the system. This screen shows the extruders' status and the production parameters. Press the *LINE* button to switch the display to the line screen.

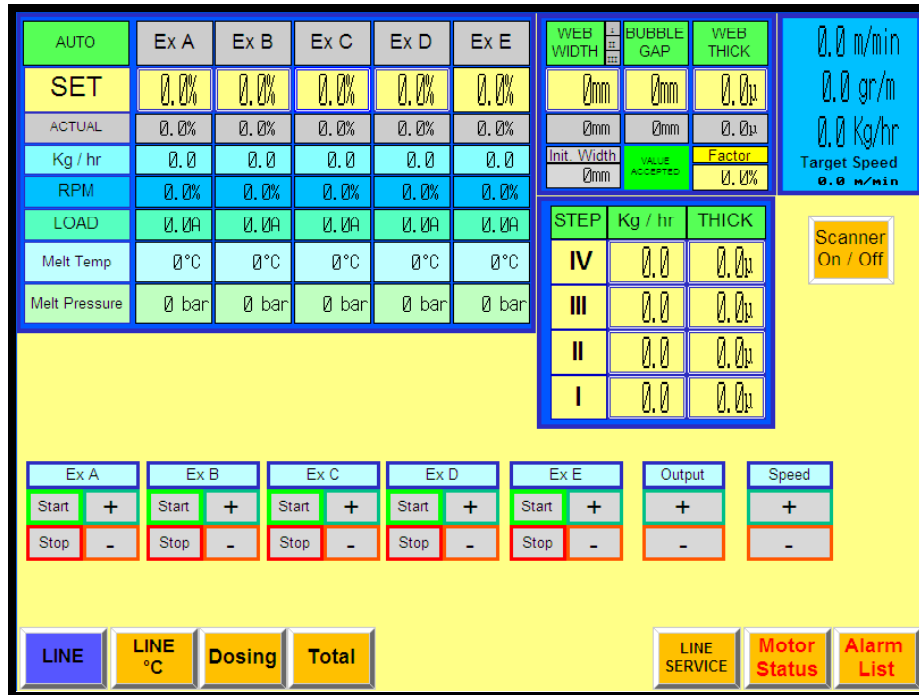


Figure 3.1-1 – Line screen

The line screen shows the following data:

- For each extruder (*Ex A*, *Ex B*, *Ex C*, *Ex D*, *Ex E*):
 - *SET* and *ACTUAL* output as percentage of the total line throughput
 - *Kg/hr* - The output by *Kg/hr*
 - *RPM* - The extruder's *RPM*
 - *LOAD* - The extruder's motor *LOAD* shown in Amps (or in percentages relatively to the maximum amps of the motor)
 - *Melt Temperature* and *Melt Pressure*
- Set and actual *WEB WIDTH* and *BUBBLE GAP*.
- Set and actual *WEB THICKNESS* and its calibration *Factor*.
- *Kg/hr* and *THICKNESS* for the Auto-pilot stages I, II, III, IV
- Production parameters:
 - Line speed by m/min
 - Web's gram-per-meter by gr/m
 - Line's throughput by Kg/hr
- Scanner On/Off - Web's thickness scanner control (optional)

Control buttons on the line screen when the line control is in manual mode:

- *Ex # Start/Stop* – start and stop the extruder
- *Ex # +/-* – increase and decrease the extruder's speed

Control buttons on the line screen when the line control is in group mode:

- *Output +/-* – increase and decrease the line's output

Control buttons on the line screen when the line control is in automatic mode:

- *Speed +/-* – increase and decrease the line's speed (nip-roll speed)

3.2. Line Temperature Screen

The line temperature screen is used for setting and monitoring the desired and the actual temperatures of the extruders, the die, the IBC air and the cooling air ring. Press the *LINE °C* button to switch the display to the temperature screen.

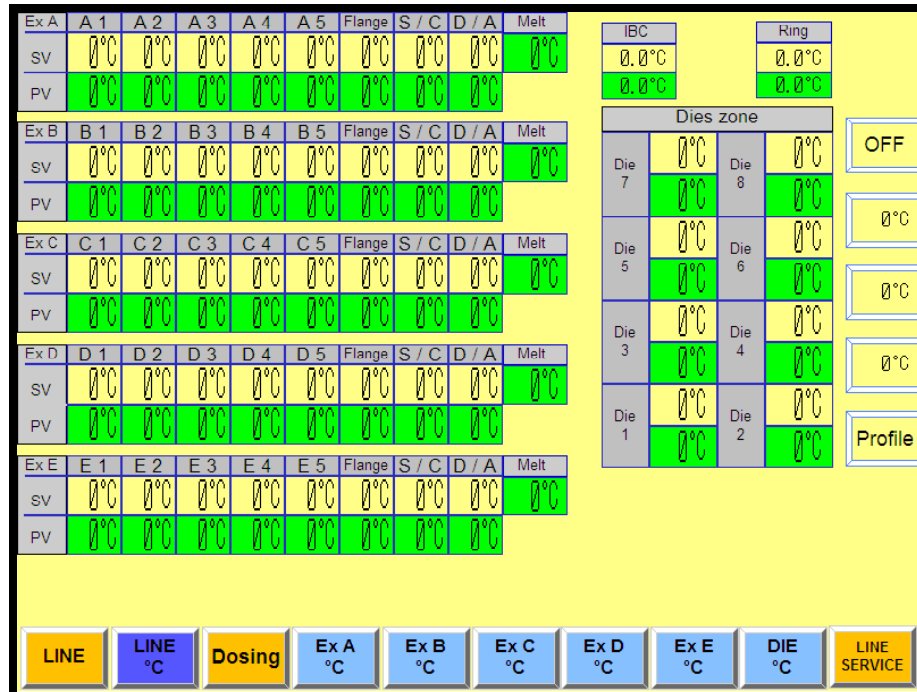


Figure 3.2-1 – Line temperature screen

3.2.1. Quick Heat

The buttons on the right side of the temperature screen enable quick adjustment of the temperatures. Pressing these buttons will set all the temperatures to the preset value (the preset values are determined in the *General* line service screen). Pressing the *OFF* button will turn off all of the heaters. Pressing the *Profile* button will set each zone to its working temperature.

3.2.2. Extruders and Die Temperature Screens

The extruders and the die temperature screens show extra data on the heaters.

SV – the set temperature

PV – the actual temperature

Eff – the working ratio of the heater

Amps – the current that is driven to the heater

A.Amps – the maximum allowed current. A higher current will cause the system to alarm.

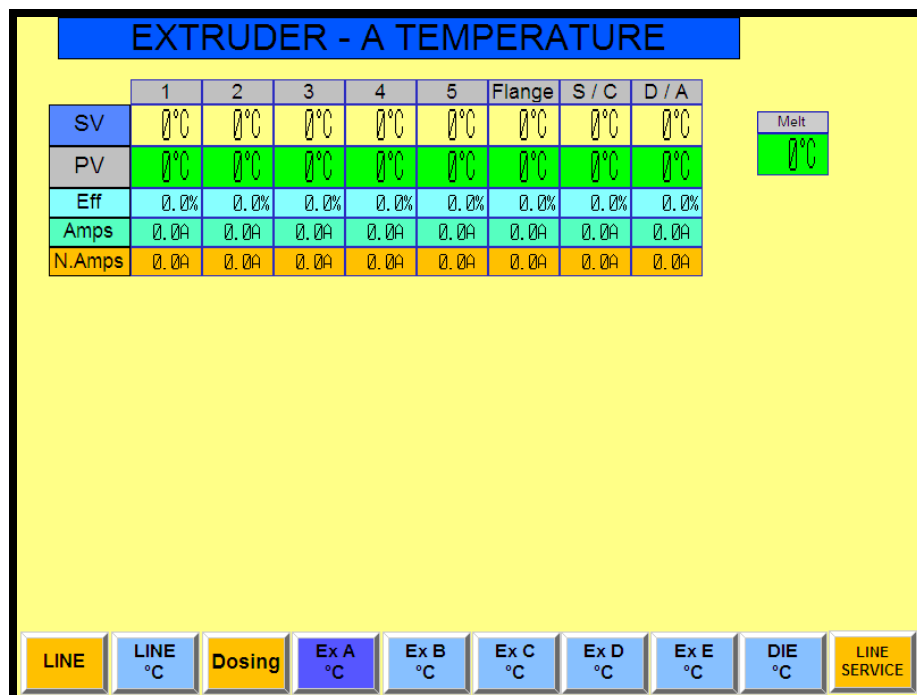


Figure 3.2-2 – Extruder temperature screen

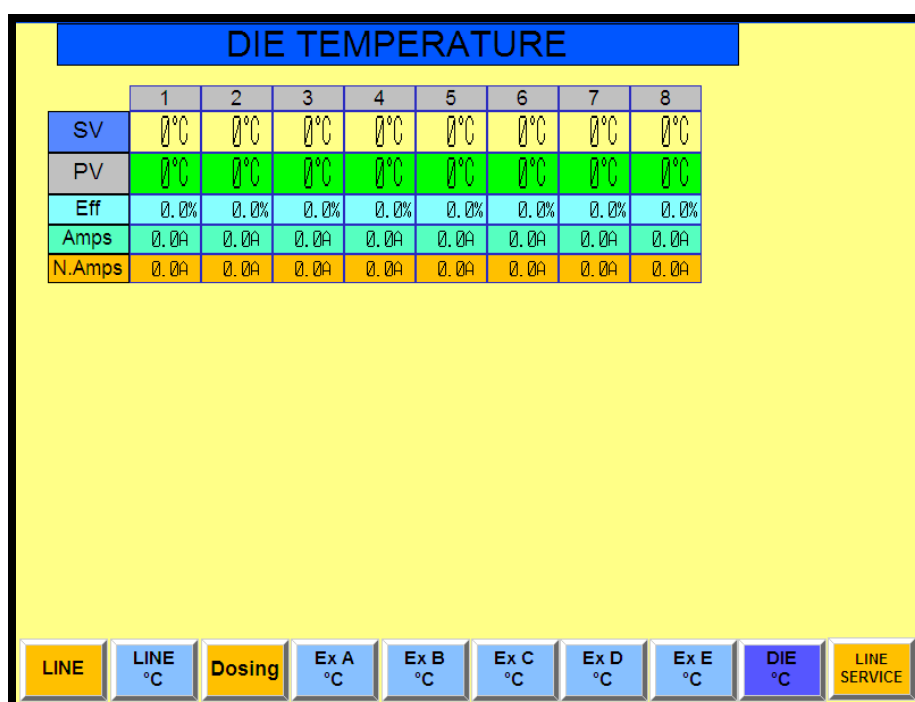


Figure 3.2-3 – Die temperature screen

3.3. Dosing Screen

The dosing screen shows the set dosing formula for each extruder and the actual formula according to the last batch that the system prepared. To enter this screen, press the *DOSING* button on the control panel.

| Extruder A | | Extruder B | | Extruder C | | Extruder D | | Extruder E | |
|------------|------|------------|------|------------|------|------------|------|------------|------|
| Set | Act | Set | Act | Set | Act | Set | Act | Set | Act |
| 1 | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% |
| 2 | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% |
| 3 | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% |
| 4 | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% |
| 5 | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% |
| Total | 0.0% | Total | 0.0% | Total | 0.0% | Total | 0.0% | Total | 0.0% |

LINE

LINE °C

Dosing

Total

LINE SERVICE

Motor Status

Alarm List

Figure 3.3-1 – Dosing screen

To set the dosing formula press the *Extruder #* label to open the formula screen, enter the desired dosing formula for the specific extruder, ensure that the *Total* is 100.0% and press *Replace Formula* to activate the new formula.

| Extruder A | | | |
|-----------------|------|------|-------|
| | Set | Act | gr/cc |
| Channel 1 | 0.0% | 0.0% | 0.000 |
| Channel 2 | 0.0% | 0.0% | 0.000 |
| Channel 3 | 0.0% | 0.0% | 0.000 |
| Channel 4 | 0.0% | 0.0% | 0.000 |
| Channel 5 | 0.0% | 0.0% | 0.000 |
| Total | 0.0% | | |
| Replace Formula | | | |

Figure 3.3-2 – Extruder formula screen

See the *CD Series* user manual for more details on the dosing formula.

3.4. Total Screen

The total screen shows the amount of raw material that was dispensed at each channel of each dosing unit for each extruder. To enter this screen, press the *Total* button on the control panel.

| Extruder A | | Extruder B | | Extruder C | | Extruder D | | Extruder E | |
|------------|----------|------------|----------|------------|----------|------------|----------|------------|----------|
| 1 | 0.000 Kg | 1 | 0.000 Kg | 1 | 0.000 Kg | 1 | 0.000 Kg | 1 | 0.000 Kg |
| 2 | 0.000 Kg | 2 | 0.000 Kg | 2 | 0.000 Kg | 2 | 0.000 Kg | 2 | 0.000 Kg |
| 3 | 0.000 Kg | 3 | 0.000 Kg | 3 | 0.000 Kg | 3 | 0.000 Kg | 3 | 0.000 Kg |
| 4 | 0.000 Kg | 4 | 0.000 Kg | 4 | 0.000 Kg | 4 | 0.000 Kg | 4 | 0.000 Kg |
| 5 | 0.000 Kg | 5 | 0.000 Kg | 5 | 0.000 Kg | 5 | 0.000 Kg | 5 | 0.000 Kg |
| Reset | | Reset | | Reset | | Reset | | Reset | |

LINE

LINE °C

Dosing

Total

LINE SERVICE

Motor Status

Alarm List

Figure 3.4-1 – Total screen

Press the *RESET* button to reset the accumulators.

3.5. Line Service Screen

The line service screen is used for setting and monitoring parameters of the line's speed and selecting speed calibration mode. Press the *LINE SERVICE* button on the control display to switch to the line service screen. The system will request the access password. The password is 4321.

| LINE SPEED CONTROL | | | |
|--|------|-------|--|
| SET SPEED DATA | | | |
| Ramp Rate | 0.0 | Sec | |
| Length Pulse Distance | 0.00 | mm | |
| Length Pulse Per Rev | 0 | | |
| Automatic Start Speed | 0.0 | m/min | |
| <div> <div>AUTO. CALIBRATION</div> <div>OFF</div> </div> <p>NOTE: When the Automatic Calibration is ON it disables the thickness calibration factor at the main screen !</p> | | | |
| ACTUAL SPEED DATA | | | |
| Maximum Speed | 0.0 | m/min | |
| Analog Speed | 0.0 | m/min | |
| Digital Speed | 0.0 | m/min | |
| Speed S.D. | 0.0 | % | |
| Max Speed S.D. | 0.0 | % | |
| SPEED CALIBRATION | | | |
| Auto Cal. Range | 0.0 | m/min | |
| Manual Calib. | 0.0 | m/min | |

LINE

°C

MODEL

IBC Control

General

LINE SERVICE

MOTOR STATUS

ALARM LIST

Figure 3.5-1 – Line service screen

Set Speed Data

1. *Ramp rate* – defines the time in seconds for ramping the production throughput from 0 to 100%.
2. *Length pulse distance* – the circumference in millimeters of the roll where the digital speed proximity switch is installed.
3. *Length pulse per Rev* – the number of pulses that the digital speed proximity switch generates per one revolution of the roll where it is installed.
4. *Automatic start speed* – the minimum start speed of the nip-roll. This value is used by the control to start the nip-roll when the production is in automatic mode.

Actual Speed Data

1. *Maximum speed* – is the calculated maximum line speed. This value is calculated based on the speed calibration.
2. *Analog speed* – the current line speed according to the analog input.
3. *Digital speed* – is the calculated line speed according to the digital pulses. This value is averaged over 30 seconds and thus it is accurate only when the line speed has not been changed for at least 30 seconds.
4. *S.d. speed* – the standard deviation of the line speed in percentage units. This value is calculated when the line is in automatic calibration.

Auto Calibration

The control system uses the analog speed for calculating the extruders speed in order to maintain the desired film's Kg/M. The analog speed, calculated from the nip-roll's motor driver reference voltage, tends to vary with time and does not maintain stability. When the system is set to automatic calibration mode it uses the digital speed sensor to continuously calibrate the analog speed thus maintaining the correct extruder speed and correct Kg/M.

To enable automatic mode press the *AUTO CALIBRATE* push button in the control display. The label next to the push button will display *ON* to indicate automatic mode. Pressing the button again will disable the automatic mode.

Speed Calibration

1. *Auto Cal. Range* – defines the allowed range of automatic calibration.
2. *Manual Calibrate* – manually calibrating the line speed. This calibration can only be carried out when the automatic calibration is disabled. There are two ways to manually calibrate the line speed:
 - a. Measure the actual line speed with a measuring device and enter that value in the *Manual Calibrate* field.
 - b. Copy the *Digital speed* value to the *Manual Calibrate* value.

3.5.1. General Screen

The general screen holds general parameters of the line operation. To enter this screen press the *LINE SERVICE* button on the control display and then press *General*.

| GENERAL LINE PARAMETERS | | |
|---------------------------------|-------|-------|
| Mon, April 17, 2006 05:40:43 PM | | |
| Hour Counters | | |
| Extruder A | 0.0 | Hours |
| Extruder B | 0.0 | Hours |
| Extruder C | 0.0 | Hours |
| Extruder D | 0.0 | Hours |
| Extruder E | 0.0 | Hours |
| Line | 0.0 | Hours |
| Vacuum Pump | 0.0 | Hours |
| Oscillating Table | | |
| Oscillating Table Rotation Time | 0 min | |
| Temperature | | |
| Temperature Range +/- | 0 °C | |
| Minimum Extruder Temperature | 0 °C | |
| Minimum Extruder Soak Time | 0 min | |
| Minimum Die Temperature | 0 °C | |
| Minimum Die Soak Time | 0 min | |
| Max Cabinet Extruder Temp | 0 °C | |
| Temp Profile 1 | 0 °C | |
| Temp Profile 2 | 0 °C | |
| Temp Profile 3 | 0 °C | |
| Extruders | | |
| Extruder A Max RPM | 0.0 | |
| Extruder B Max RPM | 0.0 | |
| Extruder C Max RPM | 0.0 | |
| Extruder D Max RPM | 0.0 | |
| Extruder E Max RPM | 0.0 | |
| Extruder Pressure Alarm | 0 bar | |
| Extruder Pressure Stop | 0 bar | |

Figure 3.5-2 – General screen

Hour Counters

1. *Extruder #* – the total working hours of each extruder.
2. *Line* – the total working hours of the line.
3. *Vacuum Pump* – the total working hours of the vacuum pump.

Oscillating Table

Oscillating Table Rotation Time – defines the time to complete one rotation of the oscillating table.

Temperature

1. *Temperature Range +/-* – range of temperature around the set temperature that is considered normal. When the extruder's actual temperature exceeds this range the system will indicate a too low temperature by a blue color on the temperature label or too high by a red color on the temperature label.
2. *Minimum Extruder Temperature* – the minimum temperature for activating the extruder.
3. *Minimum Extruder Soak Time* – the minimum time that the extruder is at the *Minimum Extruder Temperature* (or higher temperature) before allowing activating the extruder.
4. *Minimum Die Temperature* – the minimum temperature for activating the die.
5. *Minimum Die Soak Time* – the minimum time that the die is at the *Minimum Die Temperature* (or higher temperature) before allowing activating the line.
6. *Maximum Cabinet Extruder Temp* – the temperature to alarm on high temperature at the cabinet of the extruder's motor drivers.

7. *Temp Profile #* – define the temperatures for the quick heat in the temperature screen.

Extruders

1. *Extruder # Max RPM* – the maximum RPM of each extruder.
2. *Extruder Pressure Alarm* – the pressure at which the system will alarm.
3. *Extruder Pressure Stop* – the pressure at which the system will stop the extruder.

3.5.2. IBC Tuning Screen

The IBC tuning screen holds parameters for the IBC control. To enter this screen press the *LINE SERVICE* button on the control display and then press *IBC Control*.

| IBC TUNING | | | | | | | | | |
|----------------------|-------|---------------------|------------------------|------------------------|------|-------------------|-----|--------------|--|
| Radius Sensor | | Cage Sensor | | Balancing Valve | | Valve Type | | | |
| Far Value | 0mm | Far Value | 0.0mm | Zero Position | 0.0% | N. Close | | | |
| Near Value | 0mm | Near Value | 0.0mm | Maximum Travel | 0.0% | | | | |
| Installed Radius | 0mm | Gage Offset | 0mm | Control Value | 0.0% | | | | |
| Reference Target | 0mm | Cage #5 | 0.0mm | Valve Open--Close | 0.0% | | | | |
| Radius #1 | 0mm | Cage #6 | 0.0mm | Cage Control | | Mode | | | |
| Radius #2 | 0mm | Cage #7 | 0.0mm | Cage Factor | 0.0 | Manual | | | |
| Radius #3 | 0mm | Cage #8 | 0.0mm | Set Radius | 0mm | Auto | | | |
| Reference Target | 0mm | | | Actual Radius | 0mm | Conti. | | | |
| General Data | | Blowers Data | | Web | | | | | |
| Tower Height | 0.00M | Intake Blower | 0.000M ³ /s | Set | 0mm | Width | 0mm | CAGE MOVE | |
| Coll. Frame Height | 0.00M | Exhaust Ratio | 0.000 | Actual | 0mm | Gap | 0mm | Calibrate | |
| Feedback Distance | 0.00M | Correction Range | 0.000 | Minimum | 0mm | | | 0mm | |
| Cage Height | 0.00M | Blower Ramp Rate | 0.0/s | Maximum | 0mm | | | I II III | |
| Width Error Alarm | 0mm | Max Blower Speed | 0.0 | | | | | Ls 0.0 | |
| Ramp Compensate | 0 | Control Ratio | 0.000 | | | | | In 0.0% | |
| | | Actual Ratio | 0.000 | | | | | Ex 0.0% | |

LINE °C

MODEL IBC Control General

LINE SERVICE MOTOR STATUS ALARM LIST

Figure 3.5-3 – IBC Tuning screen

See the ABC user manual for details on the IBC parameters.

3.5.3. Model Screen

The system uses a control technique called “modeling”. The modeling technique is a special control technique that enables stable and accurate control. It is based on the actual terms involved in the process, as opposed to the general control techniques (PID etc.). The idea of the modeling technique is to evaluate the mass per revolution that the extruder screw pumps. The model evaluation is capable of handling the screw nonlinearity as well. All calculations are carried out in natural controller numbers rather than physical terms in order to obtain full accuracy (for this reason some of the values will use “z” units). To enter the model screen, press the *LINE SPEED* button on the control display and then press *MODEL*.

| | EX - A | EX - B | EX - C | EX - D | EX - E |
|--------------|-----------|-----------|-----------|-----------|-----------|
| Monitor | | | | | |
| RPM | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% |
| Output | 0.0 Kg/hr | 0.0 Kg/hr | 0.0 Kg/hr | 0.0 Kg/hr | 0.0 Kg/hr |
| Reject | 0.0 sec | 0.0 sec | 0.0 sec | 0.0 sec | 0.0 sec |
| Counter | 0 u | 0 u | 0 u | 0 u | 0 u |
| Last cap. | 0 z | 0 z | 0 z | 0 z | 0 z |
| Average cap. | 0 z | 0 z | 0 z | 0 z | 0 z |
| S.D. | 0.0% | 0.0% | 0.0% | 0.0% | 0.0% |
| Setup | | | | | |
| Max cap. | 0 z | 0 z | 0 z | 0 z | 0 z |
| Min cap. | 0 z | 0 z | 0 z | 0 z | 0 z |
| Reject | 0.0 sec | 0.0 sec | 0.0 sec | 0.0 sec | 0.0 sec |

LINE °C

MODEL IBC Control General LINE SERVICE MOTOR STATUS ALARM LIST

Figure 3.5-4 – Model screen

Monitor

1. *RPM* – the R.P.M. of the extruder in percentage.
2. *Output* – the output of the extruder in Kg/h.
3. *Reject* – minimum time delay between adjacent batches. If a second batch is processed before this time has elapsed the system will temporarily disable the control and will preset the batch *Counter* to 4u.
4. *Counter* – batch counter that represents the system stability. The system is considered stable when the counter is at zero.
5. *Last cap* – the last estimated extruder’s capacity in gram per revolution. It is calculated in relative units, denoted by z. The *Last cap* is compared to the min and max levels, after every batch, and if exceeds the *Counter* is preset to 4u. Such an event occurs usually after interference in the material flow and it stops the values updating until the line stabilizes again.
6. *Average cap* – the final filtered value of the extruder’s capacity.
7. *S.D.* – the standard deviation of the screw capacity values in percentage units.

Setup

1. *Max cap* – the maximum allowed value for the *Last cap* parameter.
2. *Min cap* – the minimum allowed value for the *Last cap* parameter.
3. *Reject Set* – the set value for the *Reject* timer.

3.6. Motor Status Screen

The motor status screen shows the line's motor drivers alarms. The screen shows active alarms if exists and recent alarms (memory alarms). Press the *Motor Status* button on the control display to switch to this screen.

LINE MOTOR STATUS

| | | | | | | | | | | | | | | | | | | | | | | |
|------------------------------|------------|-----|------------|-----|------------|-----|------------|-----|------------|-----|-----------------|-----|---------------|-----|----------------|-----|-------|-----|-----------------|-----|-----------------|-----|
| Act = Actual Mem = Memory | Extruder A | | Extruder B | | Extruder C | | Extruder D | | Extruder E | | Air Ring Blower | | Intake Blower | | Exhaust Blower | | S Nip | | Treater 1 Motor | | Treater 2 Motor | |
| Drive Fault | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem |
| Coast Stop | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem |
| Fast Stop | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem |
| Drive Blocked | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem |
| Cabinet Temperature | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem |
| Q Stop | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem |
| C Stop | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem |
| Low Voltage | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem |
| Emergency Stop | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem |
| Kib Filter | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem | Act | Mem |

Memory Reset

LINE

LINE °C

Dosing

Total

LINE SERVICE

Motor Status

Alarm List

Figure 3.6-1 – Motor Status screen

3.7. Alarms Screen

The system creates an alarm log. Press the *ALARM* button on the display to switch to the alarm log screen.

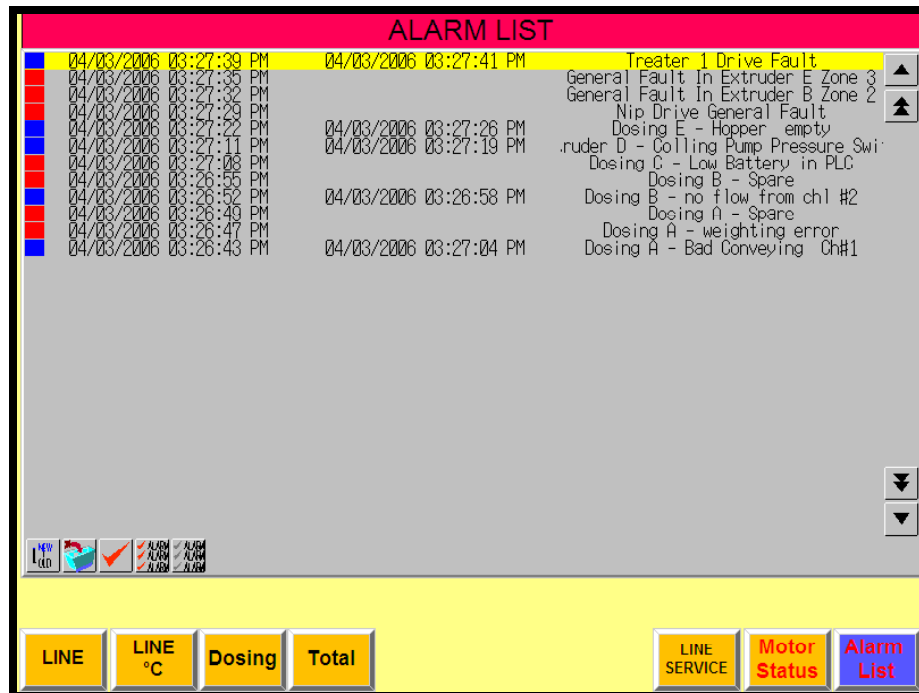


Figure 3.7-1 – Alarms screen

The alarm log shows which alarms were active and the start and end time of each alarm.

4. Production Stability and Accuracy

The control on the extruder throughput relies on the known size batches of raw material supplied to the extruder continuously by the CD dosing unit. During operation, every time a batch of raw material is supplied to the extruder the *Last cap* is updated. In normal operation, the *Last cap* parameter should be stable, it should be approximately twice the *Min cap* value and approximately half the *Max cap* value and it should be close to the *Average cap* value. In addition, the *S.D.* should be lower than 4%. Monitoring these values for several consecutive batches will provide all the data necessary to locate any problem.

If the *Last cap* value is not stable and/or the *S.D.* is relatively high (more than 4%) check the following:

4.1. CD Weighing Bucket Loadcell

1. Clean the weighing bucket loadcell of the CD dosing unit.
2. Check if the loadcell is connected tightly to the housing.
3. Check if the weighing bucket is calibrated. See Calibration chapter in *CD Series* user manual for more details.

4.2. CD Mixer Inlet Proximity Switch

1. Stop the CD dosing unit.
2. Open the weighing bucket service door on the CD mixer chamber and check that the proximity switch is free of dirt.
3. Define the type of proximity switch installed in the system by checking its color and act accordingly.
 - For orange Proximity Switch:
 - i. Turn the sensitivity screw located at the back of the proximity switch clockwise until the indicator LED turns off.
 - ii. Turn the sensitivity screw counterclockwise slowly until the indicator LED turns on.
 - iii. Turn the screw counterclockwise half a turn more.
 - For yellow Proximity Switch:
 - i. Turn the sensitivity screw located at the back of the proximity switch clockwise until the indicator LED turns on.
 - ii. Turn the sensitivity screw counterclockwise slowly until the indicator LED turns off.
 - iii. Turn the screw counterclockwise one more turn.

4.3. CD Mixer Rotation Proximity Switch

Monitor the CD mixer rotation proximity switch to verify it works properly:

1. While the production line and the CD unit are on, verify that when the mixer rotates the sensor's indication light is blinking.
2. Verify that the mixer is constantly stopping at the same angle.

4.4. Raw Material Supply

Check if the raw material supply to the CD unit is ok. There should always be material in the hopper loaders of the CD when batches are prepared, otherwise the batch preparation process can become too long and the supply continuity can be

damaged. However, one raw material supply problem in 10 minutes is still acceptable and will not disturb the stability and the accuracy.

4.5. Batch Preparation Process Time

Batch preparation process in the CD unit should always be shorter than 1 minute. If the process is longer than 1 minute monitor the CD unit and identify the cause of delay.

4.6. Batch Size

If the batch size of the CD unit is too small it causes the batches to be supplied, from the dosing unit to the extruder, in pairs and that can disturb the control process. When it happens the interruption counter (*Counter*) of the system is preset to the value 4u, standard deviation (*S.D.*) will be relatively high (more than 4%) and the gram per revolution value (*Last cap*) will be instable.

4.7. Screw Capacity Out of Range

If the value of *Last cap* is out of range or close to the minimum or maximum levels please consult Sysmetric support.